



life without limit™

English

buggy instruction guide

For all Mountain Buggy™ models:

swift™

urban jungle™

duo™

terrain™

Our buggies conform to the following safety standards:

EN 1888:2005, ASTM F833-08, SOR/85-379 & AS/NZS 2088:2000 – CPN8

terrain only - AS/NZS 2088:2009 – CPN8

Model swift MB1-S1, Model urban jungle MB1-U1, Model duo MB1-U2. Model terrain MB1-T1

Issue June 2010

Welcome

Congratulations on your purchase of a mountain buggy.

We know how precious and inspiring a new little person can be in your world. It's so important to be able to show your baby to the world and just as important to show the world to your baby.

At Mountain Buggy you and your baby matter to us. That's why we have spent years researching and developing a product that is safe, comfortable and in tune with modern parents' needs. We want you to be able to live your new family lifestyle with all the freedom and satisfaction you have always experienced.

Please take the time to read through this manual carefully. Your mountain buggy will provide you with optimum safety if you follow the instructions as detailed.

If you have any concerns, questions or comments about your mountain buggy or how to use it, please do not hesitate to contact us. We'd love to hear from you.

FOR THE SAKE OF YOUR PRECIOUS PASSENGER, PLEASE READ THESE WARNINGS BEFORE USING YOUR MOUNTAIN BUGGY.

Important: read instructions carefully, follow them strictly and keep this booklet for future reference. Your child's safety is your responsibility.



Capacity

- urban jungle, swift, duo and terrain seat is suitable for children from newborn up to 6 years.
- For use with a newborn (0-6 months) the seat should be reclined fully.
- Other newborn options include:
 1. mountain buggy® carrycot
 2. mountain buggy® travel system
- Maximum seat loading for swift, urban jungle and terrain is 35kg/77lb, and 25kg/55lb per seat on duo. This seat is for a child of 100cm/39.4" maximum height. Maximum loading for the storage basket is 5kg/11lb.



Important Use Information

- Never leave your child unattended.
- Ensure that all locking devices are engaged before use.
- This buggy is designed for one child in each seat.
- Passenger should remain seated (no standing in the buggy).
- To prevent the buggy from becoming unstable, do not place parcels or accessory items anywhere except in the storage basket and pockets provided. Do not hang items such as shopping bags from the frame.
- Overloading and incorrect folding may damage or break this buggy.
- Accessories or replacement parts that are not approved by the manufacturer or distributor should not be used.
- Excessive weight may create hazardous unstable conditions.
- Do not use buggy on travelators or escalators.
- Do not use near an open fire or exposed flame.

Erecting and Folding the Buggy

Putting up your buggy

When you first receive your buggy, remove it from the box and the plastic outer wrapping.

Dispose of plastic wrapping safely to avoid a child suffocating.



1. Grip buggy above hinge joints, and lift.
2. Place pressure on foot rest to ensure sliding locks are fully engaged.
3. Clip sunhood onto the buggy frame.



WARNING: Ensure that all locking devices are engaged before use.

Folding your buggy


1. Fold handle adjuster under.
2. Push sunhood back.
3. Ensure front wheel(s) are unlocked and rotated forward before folding.
4. Flick the sliding lock guard out and pull up the sliding lock on both sides of the foot rest.

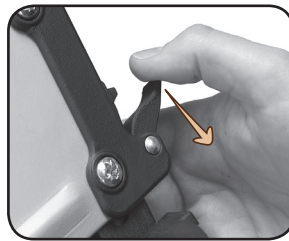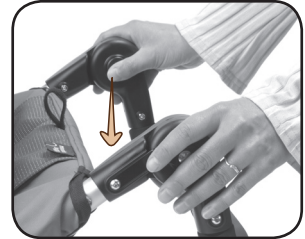

Wheel Assembly

Front Wheel Assembly

1. Holding both knobs at the same time, unscrew and pull out the front axle.
2. Insert the front wheel.
3. Re-insert the axle and tighten both knobs by hand to secure wheel in place.

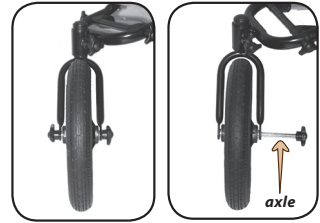

To remove

Repeat above in reverse.

Tracking device (terrain only)

1. Swivel front wheel straight ahead in the lock forward position.
2. Loosen knobs on both sides of front wheel.
3. Move tracking adjustor forward or backward to adjust wheel position, so it runs in a straight line.
4. Tighten knobs to secure the front wheel in place.



Rear Wheel Assembly

1. swift, urban jungle and terrain with push-in axle:
 - Push forward on the grey axle release tab and push the axles out slightly and release the tab.
 - Push the axle out further until you hear a click.
2. all buggies:
 - Slide wheels (with brake cog facing inwards) onto the axles.
 - Push each wheel on until it clicks into place. Pull on the wheel to ensure it is secure.



To remove

Depress quick release clip and slide wheel off axles. swift, urban jungle and terrain axles can be pushed in to reduce the total folded size. Push the axle release tab and push the axles in until they click into place.



Front Swivel Wheel


Locking the front swivel wheel is recommended for use on uneven ground.

To lock Pull knob out and turn it so the 'locked' symbol is at the top then swivel front wheel(s) under buggy until it locks into place.

To unlock Pull knob out and turn it 1/4 of a turn so the 'unlocked' symbol is at the top.

To lock forward (terrain only)

Pull knob out and turn it so the 'locked' symbol is at the top then swivel front wheel straight ahead, away from the buggy, until it locks into place.

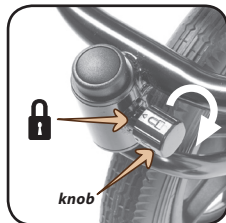

Park Brake

It is important to put the park brake on whenever you park the buggy. Ensure it is on when putting your child in or taking your child out of the buggy.

To apply

Push park brake lever completely down.



To release

Lift park brake lever completely up.



Hand Brake (terrain only)

To brake, apply pressure on the hand lever. If the buggy isn't stopping in a straight line, there is an adjuster on both wheels.



Seat Recline


The seat back can be reclined to any position between the upright and fully reclined positions.

To recline

Pull on the buckles to slide the straps through the buckles and recline the seat.

To raise

Pull straps through the buckles to raise the seat angle.

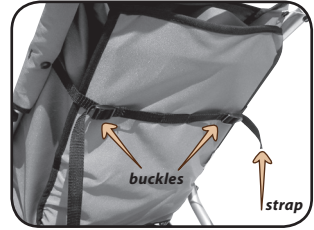

Bumper Bar

To attach

1. Pull fabric back between hinge joint and sunhood lug to expose part of the frame.
2. Fit snap-lock of bumper bar to frame.
3. Close locks on both sides to securely lock onto frame.



WARNING: The bumper bar does not replace safety harness. Secure infant in safety harness at all times. Do not use the bumper bar as a carrying handle.



Safety Wrist Strap

Use the safety wrist strap in all situations. Ensure that the loop of the strap is located around the wrist of the person pushing the buggy.

Care should be taken if the buggy is used down hills or in strong winds.



Safety Harness


The buggy comes with the shoulder straps set to newborn position. Shoulder strap height should be located just below or level with a child's shoulders. The older the child, the further up the seat the straps need to be.

To fasten

Clip shoulder strap buckle ends into crotch plate.



To release

Press red buttons (if present on your model) and squeeze tabs on either side of crotch plate to release shoulder straps.

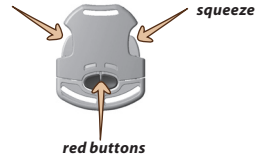

To adjust shoulder straps height

1. Locate buckle by slipping hand up the inside back of the seat.
 2. Push the rectangular shaped buckle through the insertion slot on an angle, pushing the corner of the buckle first.
 3. Re-thread the corner of the buckle through the most suitable height insertion slot for your child.
 4. Once the buckle is through the slot, twist it so it is flat against the seat back and then check it is secure by pulling on strap.
- * For newer versions, twist and push up /down the slider to the suitable height for your child.

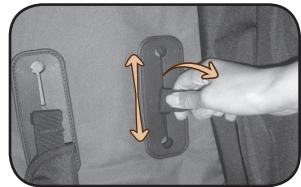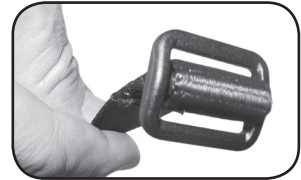


To adjust harness length

Locate buckles inside shoulder pads and lift buckle up.

- Pull harness straps to lengthen harness
- Pull strap ends to shorten harness



WARNING: Use this harness at all times. When not in use, disconnect shoulder straps from the waist strap and/or buckle as they may be a strangulation hazard.

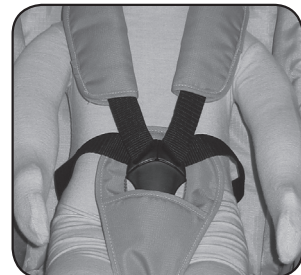

Removing Seat and Sunhood

Seat removal

1. Unfasten seat domes from frame along side tubes (4 domes each side).
2. Unfasten strap underneath seat and those attached to frame (1 strap each side).
3. Unfasten the domes which fasten the sunhood and seat together.



To refit seat

Follow removal instructions in reverse. Ensure fabric is domed OVER frame.



Sunhood removal

1. Detach sunhood from sunhood lugs on either side of buggy frame.
2. Unfasten sunhood domes that attach the sunhood to buggy frame and to buggy seat back.



To refit sunhood

Follow removal instructions in reverse.

Buggy Care

Regular maintenance is needed to keep the buggy working effectively and safely.

Cleaning

Fabric

The fabric should be cleaned regularly. Brush off any excessive dirt or sand and rinse with lukewarm water. Fabric can be removed and washed by hand using a mild natural soap solution in lukewarm water (no more than 38°C/100°F). Rinse thoroughly. DO NOT tumble dry or dry in strong sunlight. To avoid fabric fading, cover the buggy if it is exposed to direct sunlight through glass e.g. in a car or if stored in exposed areas.

Frame

If the buggy is used in exposed environments such as salt water, salt spray or beach sand, wash any steel parts of the buggy by hosing the buggy or use warm soapy water, dry thoroughly and protect by spraying with light aerosol can oil, eg WD40® or CRC®.

Storage

Store buggy inside in a dry place but away from central heating units/radiators and do not store in airing or hotwater cupboards. Fabric may develop mould or mildew if stored in humid or damp conditions.

Tyres/Tubes

- If a puncture occurs the inner tube can be repaired with a bicycle repair kit, or replaced.
- If tread becomes worn the tyre should be replaced. Contact your local dealer, or most cycle stores have tubes and repair kits.
- Inflate tyres to pressure of 20psi (140KPa). Do not exceed 30psi (210KPa).


Handlebar Grip

Take care to protect the handlebar grip from abrasion or sharp objects. Your local dealer can arrange replacement grips and instructions if required.



Brake

The brake should be lubricated regularly to maintain optimum operation. It may require extra lubrication if it is difficult to operate.


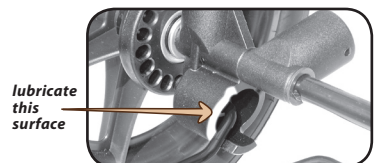


Handbrake Care (terrain only)

As the brake wears you can adjust it by unscrewing the locking collar and winding out the brake adjuster until brake tension is correct. Then rewind locking collar back in.

Brakepads (terrain only)

If the brakes start making scrapping noises then check brake pads are not worn.

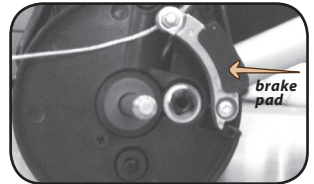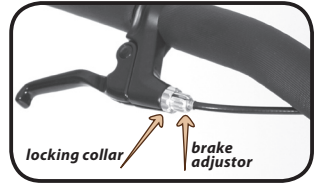

Top Tips

Transporting your buggy

A special locking strap is located on the cross brace bar, or for the swift on the handlebar. Wrap this strap around the axle and then clip fasteners together to secure buggy closed when folded.

Tyre Pump

To use a pump, remove the connection hose and attach relevant ends to top of pump and wheel valve. Do not overtighten. Ensure there is no tension on the connection hose while inflating tyre.

Protective Covers

Sun

Zip the sun cover to the buggy sunhood and fasten the toggles to the sides and attach the strap under the foot plate.

Note: duo sun cover fastens over the sunhood.

Storm

Fit the cover over the sunhood and fasten the toggles to the top and sides, and attach the strap under the foot plate.

Important

- Remove the storm or sun cover before folding the buggy to avoid damage.
- Remember not to leave the storm cover on in warm conditions, and check your child's comfort frequently.
- Always check your child to make sure they are not overheating.



Mountain Buggy World Warranty

Our products are warranted against defects in materials and workmanship for one year from the date of purchase. If the product has a manufacturing fault we will repair it free of charge. If not practical to repair it, we will, at our discretion, replace the part in question. If the product fails due to wear and tear, accident, neglect or negligence, or is outside the warranty, we will happily repair it for a reasonable charge.*

Who is covered?

The original purchaser buying product from an authorised dealer in the same country as the purchaser. Proof of purchase is required.

What is covered?

Workmanship or materials that are deemed by us to be faulty, providing the product has at all times been used in normal conditions in accordance with instructions, and has been properly maintained.

What is not covered?

Second hand product, modified product, poorly maintained product, normal wear, fading and fabric cuts, improper use (by way of example): abnormal use; not following instructions; damage caused by exposure to excessive heat; punctures; over inflation of tyres; child left unattended; excessive load; transport damage i.e. airline or freight damage.

Customer costs within warranty

The customer is responsible for any inwards freight charge to return the product to the manufacturer or its representative for warranty and/or service.

Customer costs outside warranty

Where proof of purchase is not provided or the product is outside of the one year warranty period, the manufacturer (or agent) reserves the right to charge a service fee and/or charge for parts replaced/ repaired. A return freight charge will also apply.

Exclusions

Any consequential loss or damage to any person or property directly or indirectly as a result of using the product.

Who do I contact?

Consult the warranty section of the Mountain Buggy website (www.mountainbuggy.com/warranty) which guides you through the warranty claim process.


Note: you will need to provide proof of purchase.

Register product

Please register your product online by visiting www.mountainbuggy.com

*Consumers may have extra rights in some countries or states.

Parts of the Buggy Frame

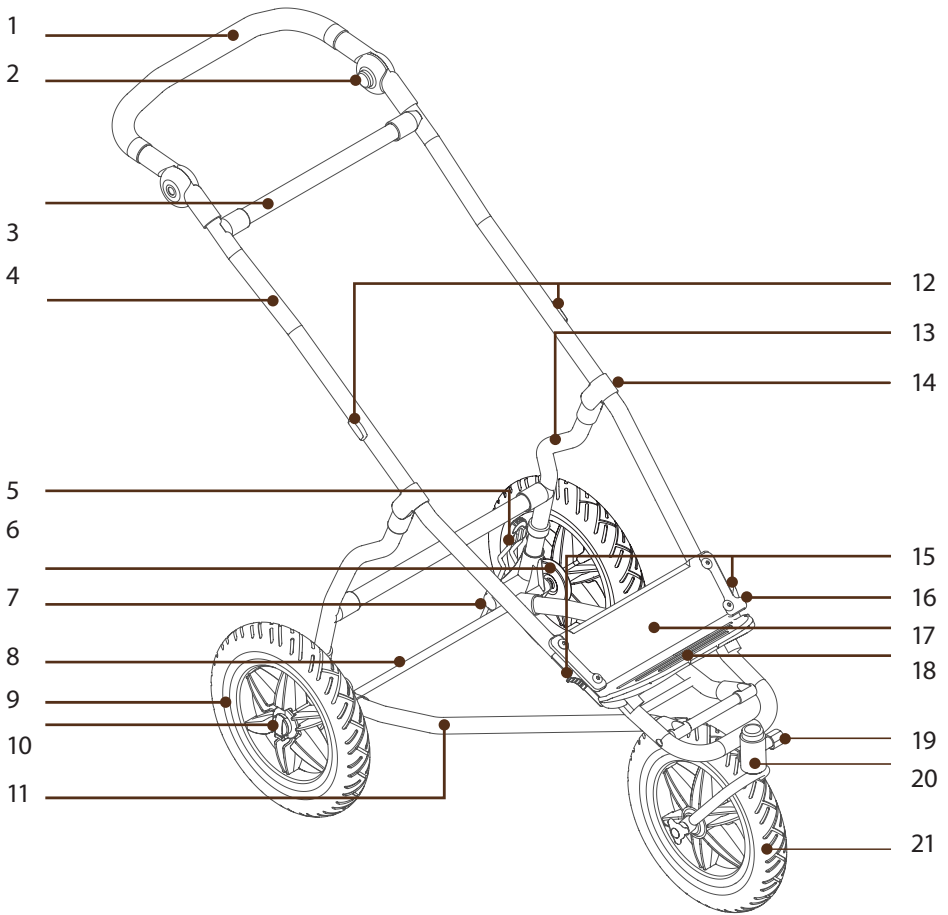

- | | | | |
|--------------------|------------------------|--------------------|-------------------------|
| 1. Handlebar | 7. Brake Cam* | 13. Down tube | 19. Swivel knob |
| 2. Handle Adjuster | 8. Rear axle | 14. Hinge joint | 20. Front wheel swivel* |
| 3. Cross brace bar | 9. Rear wheel | 15. Sliding lock* | 21. Front wheel |
| 4. Side tube | 10. Quick release clip | 16. Secondary lock | |
| 5. Brake lever | 11. Base tube | 17. Riser plate | |
| 6. Brake cog | 12. Sunhood lugs | 18. Foot rest | |

Note: Diagram is urban jungle model

*Points to lubricate periodically

ESSENTIAL WARNINGS



WARNING

IMPORTANT – READ THE INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THEM FOR FUTURE REFERENCE. YOUR CHILD'S SAFETY MAY BE AFFECTED IF YOU DO NOT FOLLOW THESE INSTRUCTIONS.

American Safety Standard (ASTM:F833-08/10) states:



WARNING

Never leave your child unattended.



WARNING

Always use the safety harness to avoid serious injury from falling or sliding out. Always secure all safety harness straps and ensure its correctly fitted and adjusted to secure the child firmly.

European Safety Standard (EN 1888:2005) states:



WARNING

It may be dangerous to leave your child unattended.



WARNING

Ensure that all locking devices are engaged before use.



WARNING

Use a harness as soon as your child can sit unaided.



WARNING

Put on all brakes whenever you park the buggy and whenever you are loading and unloading children.



WARNING

Any load attached to the handle affects the stability of the stroller.



WARNING

Check that the pram body or seat unit attachment devices are correctly engaged before use.

ESSENTIAL WARNINGS



WARNING

This product is not suitable for running or skating.

Australia/New Zealand Safety Standard (AS/NZS:2088:2009+CPN8) states:



WARNING

To avoid injury or death:

Always apply the breaks whenever the stroller is stationary.

- Do not leave children unattended.
- Secure the child in the harness at all times.
- Do not carry extra children or bags on this stroller.
- Make sure children are clear of any moving parts if you adjust the stroller.



WARNING

It is unsafe to use accessories other than those approved by the vehicle manufacturer.



WARNING

The buggy should not be used unassisted on stairs or escalators.



WARNING

Avoid serious injury from falling or sliding out. Always use seat belt.

Canadian Safety Standard (SOR/85-379) states:



WARNING

Never leave your child unattended in the stroller.



WARNING

The buggy may become unstable if the recommended load is exceeded.



WARNING

Take care when folding or unfolding the buggy to prevent your fingers being entrapped.